



# Valo Wireless RF CCT 4 group controller (VaLO-R4-CCT)

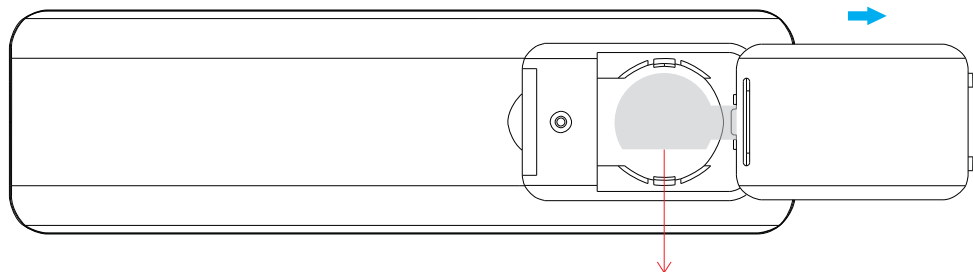

**Important:** Read All Instructions Prior to Installation

## Function introduction

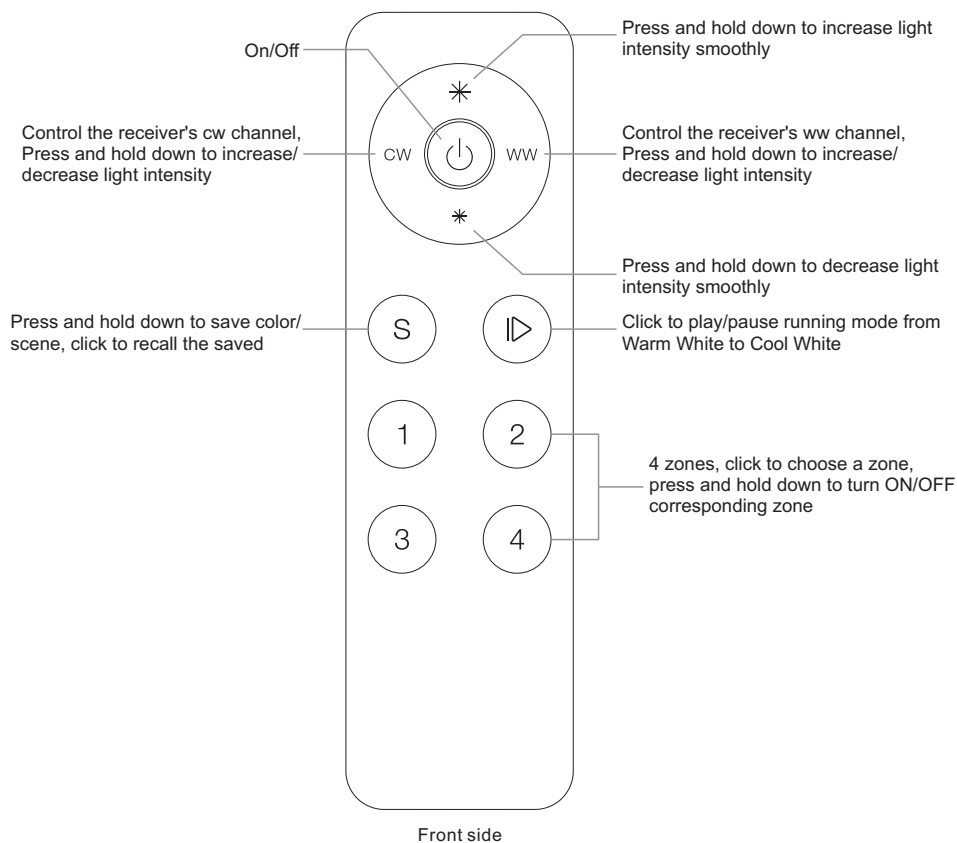

**Note:** Before the first use, please remove the protective film on the battery.

## Product Data


Output	RF signal
Operation Frequency	868/915/434MHz
Power Supply	3V(1xCR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	136.3x38.9x10.7mm

- Control 4 zones of RF receiver
- Dual color controller
- Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

## Safety & Warnings


- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

## Pair with RF receiver

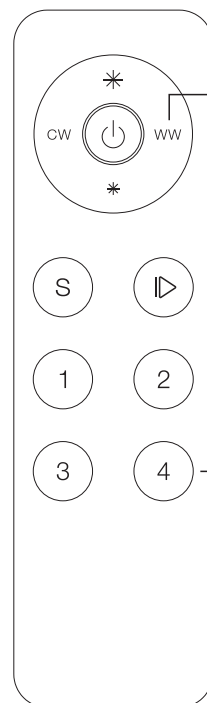

**Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

**Step 4:** Click any of the four buttons CW WW \* \* (e.g. WW), LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

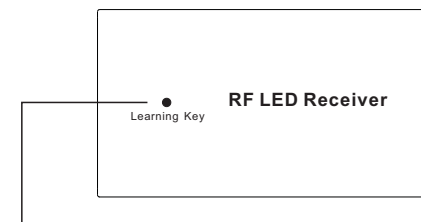

**Step 2:** Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

**Step 3:** Choose and click a zone number (e.g. zone 4)

**Note:** one receiver can be paired with max 8 remote controls.


## Operate the remote after pairing

Click the paired zone number/numbers, then click the other buttons to do the controlling




**If you use multiple receivers, you have two choices:**

 Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

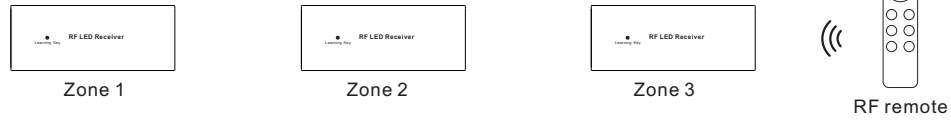

**Val**  **Wireless RF CCT 4 group controller**  
(VaLO-R4-CCT)